

SM Direct Control



Control panel to operate IFF Hoists in theaters, auditoriums and studios.

Each momentary toggle switch controls one hoist. The SM control is furnished with a key switch to prevent unauthorized access and an Emergency Stop Button. Together with the ASM power panel the SM control is a very efficient and safe way to control hoists.

Model Range

| Code | | Enclosure H x W x D |
|------------|--------------------|---------------------------------|
| FF3951Y002 | controls 2 hoists | 306x256x150 12"x 10"x 5.9" |
| FF3951Y004 | controls 4 hoists | 306x256x150 12"x 10"x 5.9" |
| FF3951Y006 | controls 6 hoists | 306x256x200 12"x10"x5.9" |
| FF3951Y010 | controls 10 hoists | 500x400x200 19.7"x15.7"x7.9" |
| FF3951Y012 | controls 12 hoists | 500x400x200 19.7"x15.7"x7.9" |
| FF3951Y018 | controls 18 hoists | 500x400x200 19.7"x15.7"x7.9" |
| FF3951Y024 | controls 24 hoists | 600x400x200 23.6"x15.5"X7.9" |
| FF3951Y030 | controls 30 hoists | 600x400x200 23.6"x15.5"X7.9" |
| FF3951Y036 | controls 36 hoists | 600x400x200 23.6"x15.5"X7.9" |
| FF3951Y042 | controls 42 hoists | 600x400x200 23.6"x15.5"X7.9" |

Technical Features

Electrical connection

| | | |
|---------|--------|--------|
| Voltage | 220VAC | 120VAC |
| Current | 1A | 1A |

Control signal

| | |
|---------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Up/down | +/- 24VDC |
| E-stop | Normally closed contact for 24V . The E-stop must be connected to the ASM power panel to ensure a proper function of the E-stop. Please contact IFF if the SM control panel is used without ASM power panel. |

